

ComfoSpot 50

Montagehinweise Wandeinbaurohr rund L = 900 mm

Verwendungszweck

Das Wandeinbaurohr rund mit einem Außendurchmesser von 315 mm besteht aus PVC und wird mit zwei Verschlussstopfen geliefert (Abb.1). Es dient zur Aufnahme des Lüftungsgerätes ComfoSpot 50. Für die Montage ist in der Außenwand eine Kernlochbohrung \varnothing 340 mm vorzusehen. Die finale Wanddicke muss im Bereich von min. 335 mm bis max. 885 mm liegen.



Abb. 1 Lieferumfang Wandeinbaurohr rund

Vorbereitungsarbeiten

Wählen Sie einen passenden Montageort in einer Außenwand. Achten Sie darauf, dass ausreichend Platz zu Gegenständen und für Wartungsarbeiten (jeweils mindestens 39 cm linksseitig, 29 cm rechtsseitig und 20 cm oben – bezogen auf die Rohrachse des PVC-Wandeinbaurohres im eingebauten Zustand) vorhanden ist. Zur Entnahme des ComfoSpot 50 aus dem PVC-Wandeinbaurohr muss frontseitig ein Freiraum von 70 cm bezogen auf die Innenseite der Außenwand eingeplant werden.



Das Lüftungsgerät ist in Feuchträumen außerhalb der Schutzbereiche der Zonen 1 und 2 gemäß DIN 57100/VDE0100 Teil 701 zu installieren!

Kernlochbohrung

Voraussetzung für eine ordnungsgemäße Installation des ComfoSpot 50 sind lotrechte Wände.



Der Durchmesser der Bohrung muss mindestens 340 mm betragen.

Es ist auf eine waagerechte Achse der Bohrung zu achten (Abb.2).



Abb. 2 Kernlochbohrung durchführen

Installation des Wandeinbaurohres

Führen Sie das PVC-Wandeinbaurohr in das Kernloch ein und positionieren Sie es in waagerechter Lage (Abb. 3). Es ist mit geeigneten Mitteln in der Bohrung zu fixieren. Zur Fixierung ist ausschließlich nicht quellender Kleber oder Montageschaum zu verwenden!



Beachten Sie, dass die Rohrachse waagerecht liegt und die Kreisform des Rohres gewährleistet bleibt (max. zul. Abweichung von der Kreisform des Innendurchmessers: +/- 1,5 mm).

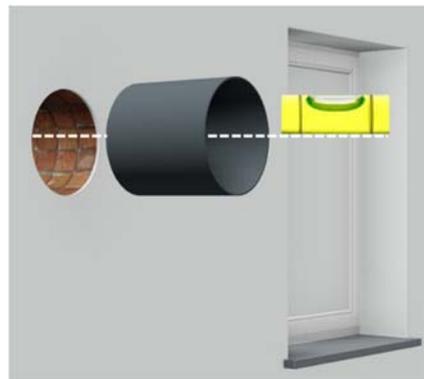


Abb. 3 Wandeinbaurohr einschieben

Vor Einbau des Lüftungsgerätes ist das PVC-Wandeinbaurohr so anzupassen, dass es bündig zur Oberfläche der Fassade bzw. der Innenwand abschließt (Abb.4). Dazu ist es jeweils oberflächenplan zur fertigen Wand mit geeignetem Werkzeug zu kürzen.



Abb. 4 Wandeinbaurohr oberflächenplan anpassen

Dichten Sie innen und außen den Wandanschluss um das PVC-Wandeinbaurohr mit geeignetem Dichtmittel ab (Abb.5).

Setzen Sie nach der Montage die Verschlussstopfen wieder beidseitig auf das PVC-Wandeinbaurohr.



Abb. 5 Wandeinbaurohr abdichten

ComfoSpot 50

Installation instructions for round wall mounting pipe L = 900 mm



Intended purpose

The round wall mounting pipe with an external diameter of 315 mm is made of PVC and is supplied with two blanking plugs (Fig. 1). It is used to hold the ComfoSpot 50 ventilation unit. A core hole measuring \varnothing 340 mm must be drilled in the external wall for installation purposes. The final wall thickness must be between a minimum of 335 mm and a maximum of 885 mm.



Fig. 1 Scope of delivery for round wall mounting pipe

Preparatory work

Choose an appropriate installation location in an external wall. Make sure that there is enough space for objects and for maintenance work to be carried out (at least 39 cm on the left, 29 cm on the right and 20 cm at the top, relative to the axis of the PVC wall mounting pipe when it is installed). At the front, make provision for an 70 cm clearance – relative to the inside of the external wall – so that the ComfoSpot 50 can be removed from the PVC wall mounting pipe.



The location of the ComfoSpot 50 must meet all local and national code requirements. Ensure that proper clearance is provided to other fixtures in bathrooms or other "wet" rooms!

Core hole drilling

Vertical walls are required for installing the ComfoSpot 50 correctly.



The hole diameter must be at least 340 mm. Make sure that the hole axis is horizontal (Fig. 2).

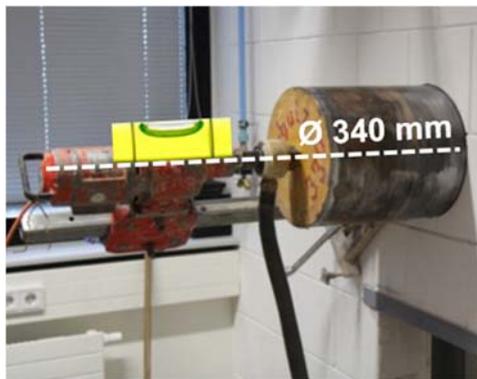


Fig. 2 Drilling the core hole

Installing the wall mounting pipe

Insert the PVC wall mounting pipe into the core hole and make sure it is in a horizontal position (Fig. 3). Fix it in place in the hole using appropriate equipment. Use only non-swelling adhesive or installation foam to fix it in place.



Make sure that the pipe axis is horizontal and that the circular shape of the pipe is maintained (the internal diameter must not deviate by any more than +/- 1.5 mm from a circular shape).


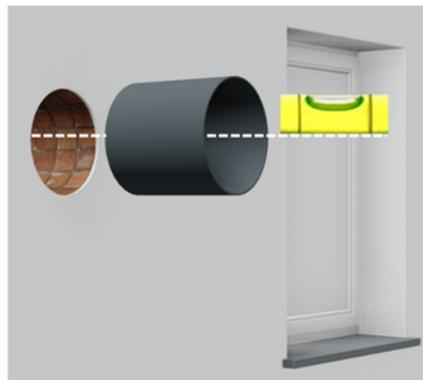


Fig. 3 Pushing in the wall mounting pipe

Before installing the ventilation unit, modify the PVC wall mounting pipe so that the end of it is flush with the surface of the façade or interior wall (Fig. 4). To do this, trim the pipe using a suitable tool until the end of it is flush with the finished wall.

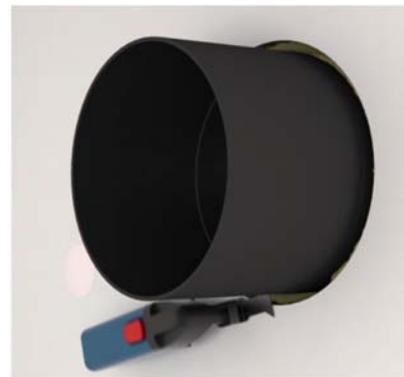

Using suitable sealant, seal the inside and outside of the wall connection around the PVC wall mounting pipe (Fig. 5). After installation, reinsert the blanking plugs at both ends of the PVC wall mounting pipe.



Fig. 5 Sealing the wall mounting pipe

Sales International

Zehnder Group Deutschland GmbH
Almweg 34 · 77933 Lahr · Germany
T +49 7821 586 392
sales.international@zehndergroup.com · www.international.zehnder-systems.com